



**Hunter®**



## Restoring Factory Defaults to Controllers

### **Ec, Pro-C and ICC Controllers**



- 1) Press and hold down the Program, Minus, Next Buttons
- 2) Momentarily press and release the reset button
- 3) Release the Program, Minus, Next Buttons

### **SRC Controller**



- 1) Remove all power (Ac and Battery) and wait for 1 minute
- 2) Press and hold down the Plus, Minus, Next buttons
- 3) Restore power
- 4) Release the Plus, Minus, Next buttons



# Hunter®



## **SVC Controllers**



- 1) Remove battery and wait 1 minute
- 2) Press and hold down the Plus, Minus, Last buttons
- 3) Restore power
- 4) Release the Plus, Minus, Last buttons

## **ICR Controller**



- 1) Remove at least 1 battery and wait for 1 minute
- 2) Press and hold down the Plus, Minus Mode buttons
- 3) Replace the battery
- 4) Release the Plus, Minus, Mode Buttons