


Hunter®

X2 WAND Installation Guide

Smart Capable Residential Irrigation Solution

HUNTER INDUSTRIES

Built on Innovation®



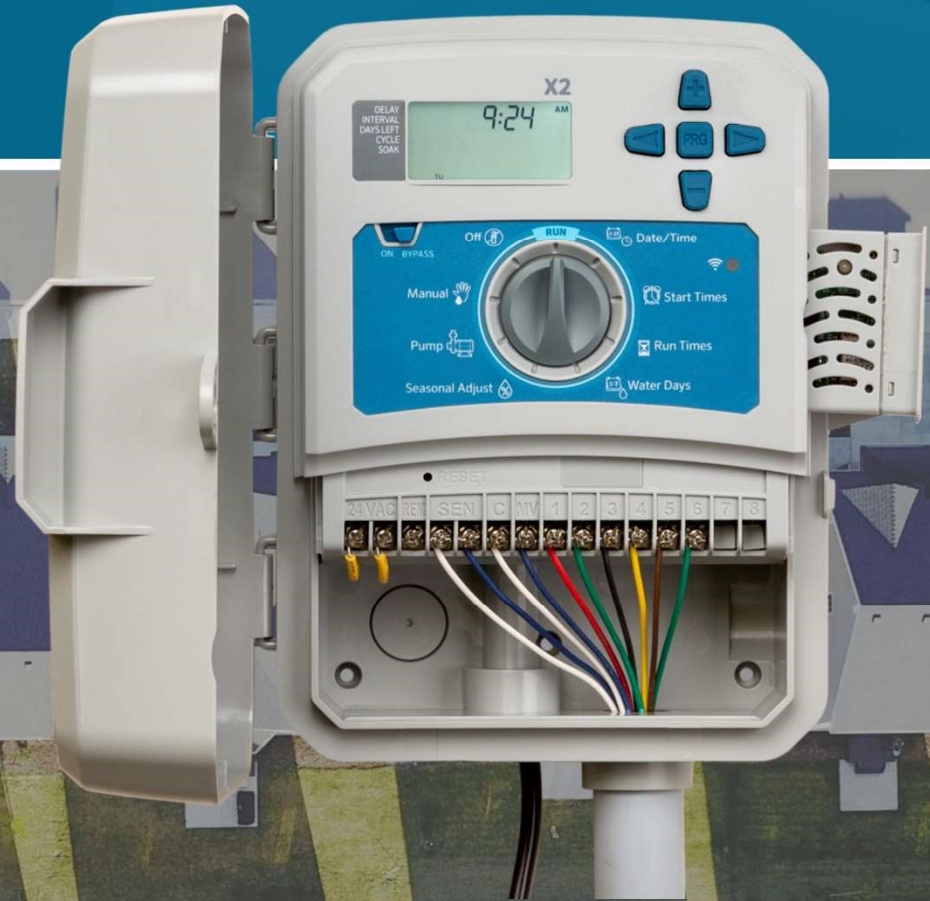






WAND: Wi-Fi Module with Hydrawise™


- Wi-Fi module plugs into right side of X2 controller accessory port
- X2 schedule and interface becomes inactive, Manual commands and OFF dial positions continue to work
- LCD shows Wi-Fi symbol and strength
- WAND module has tri-color LED for pairing and status indication




Hydrawise App.....adding controller

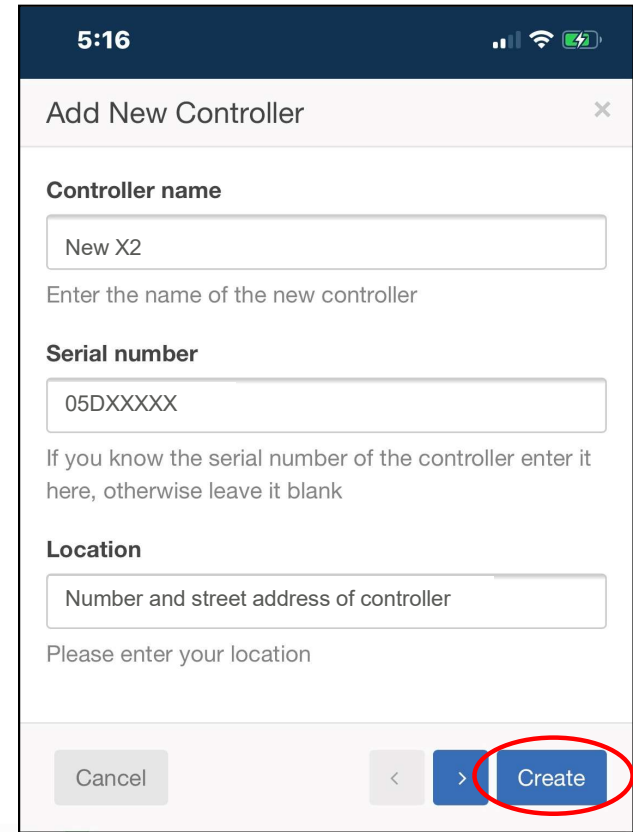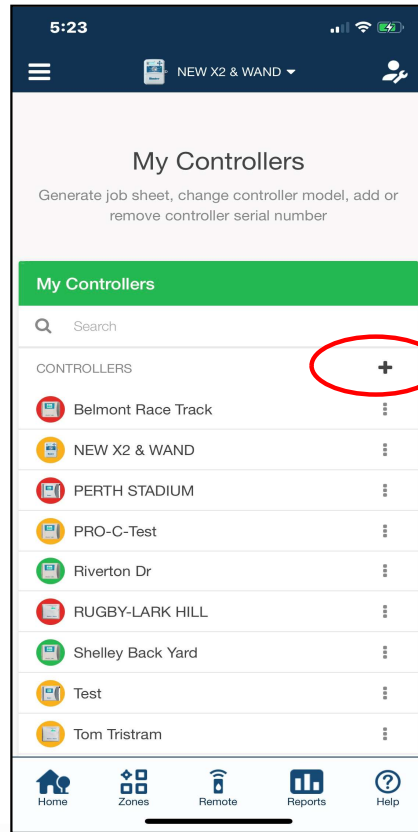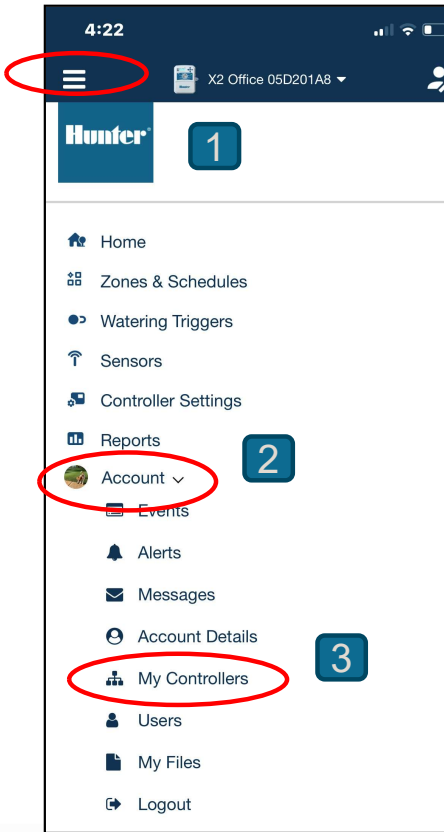

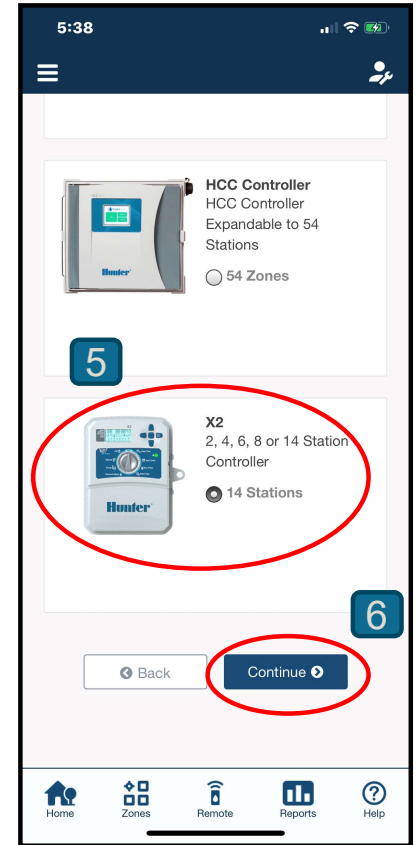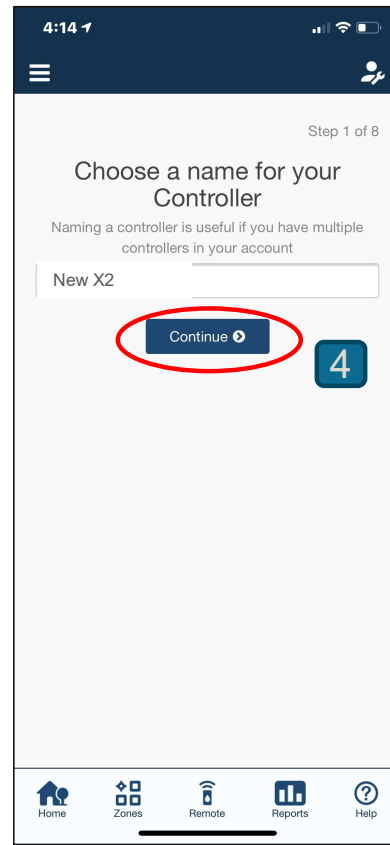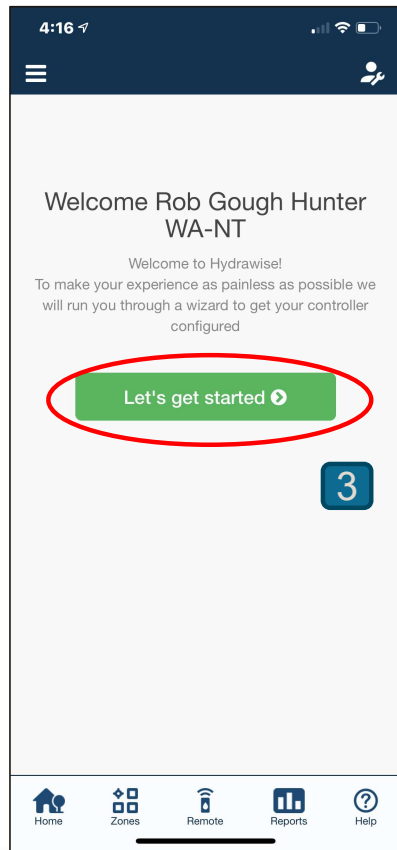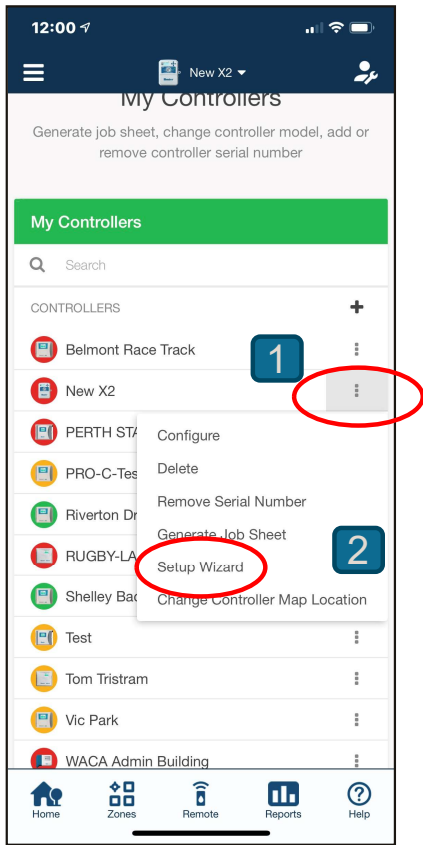


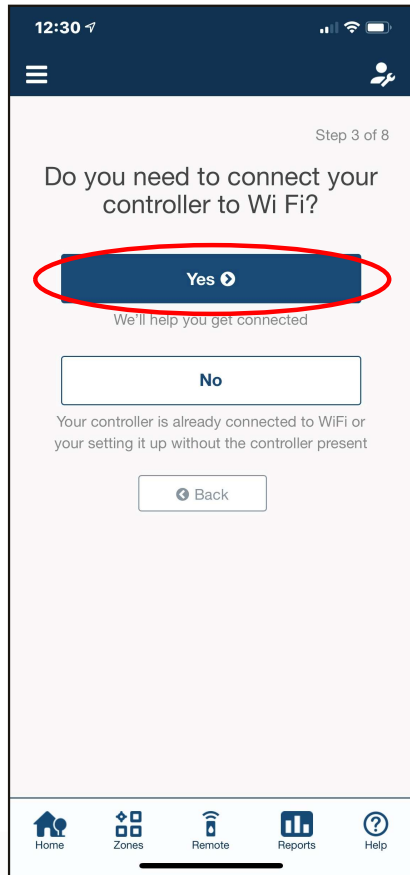

1

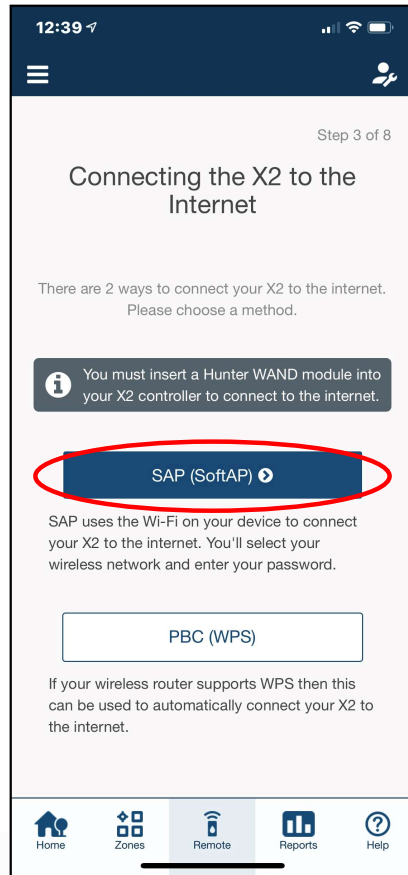


2

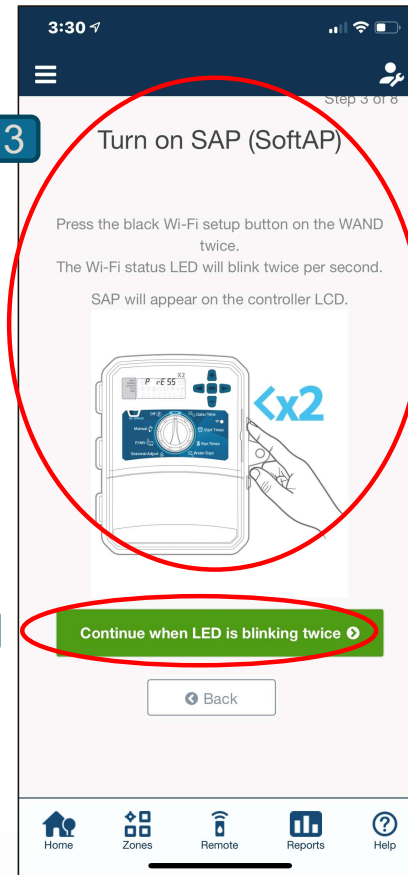

3





4




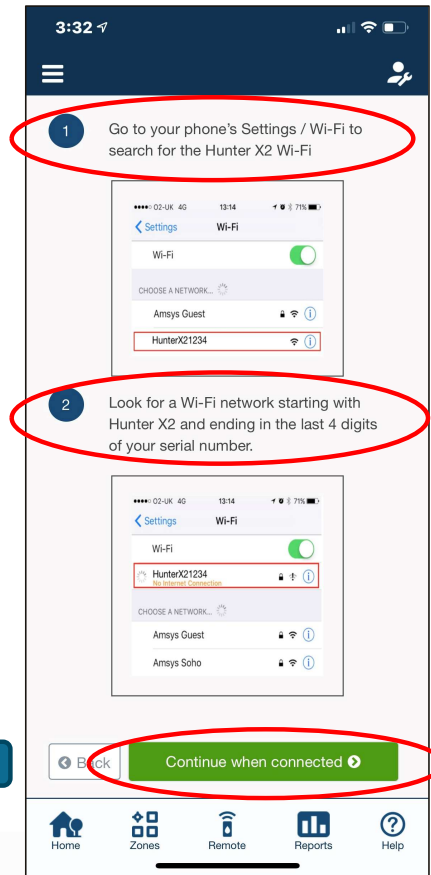






5





6

7

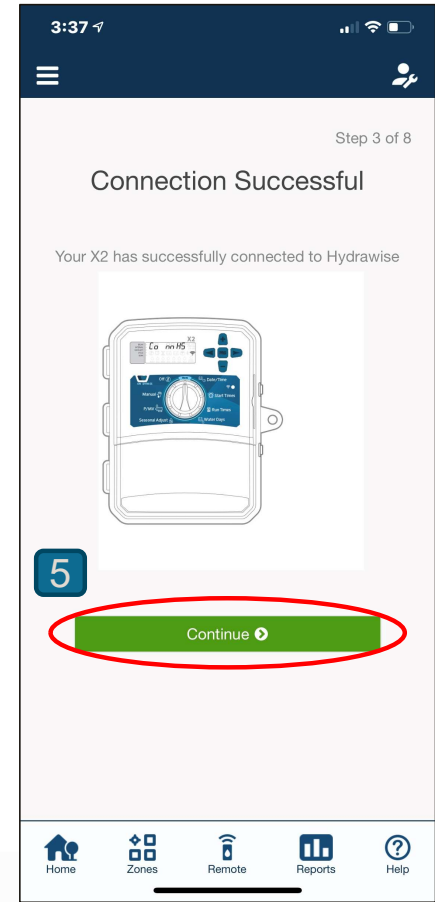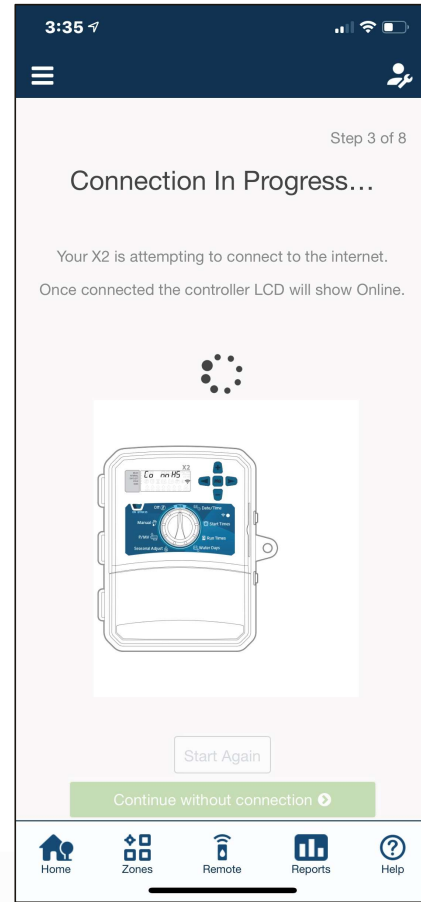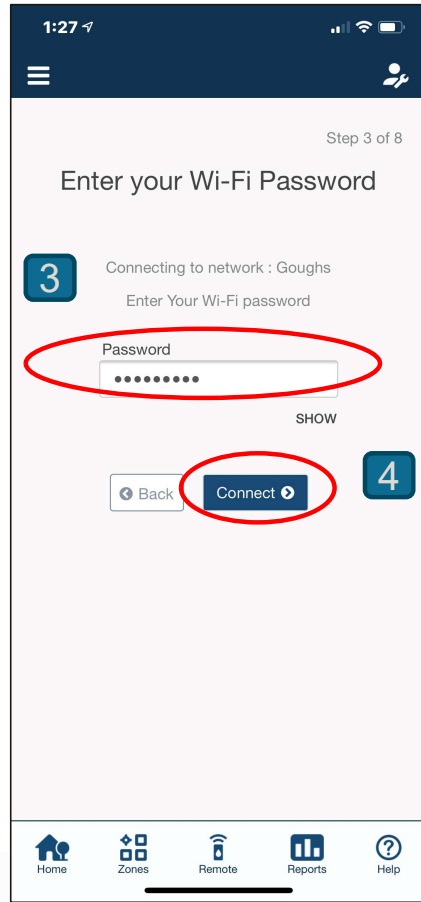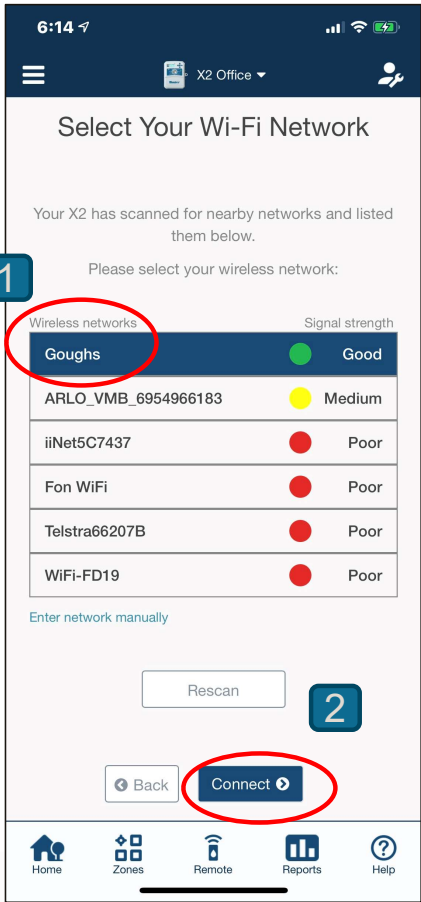

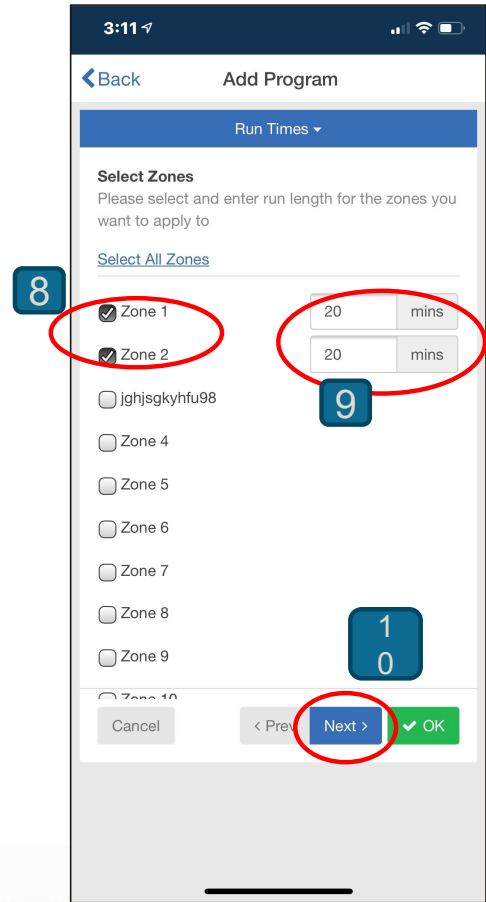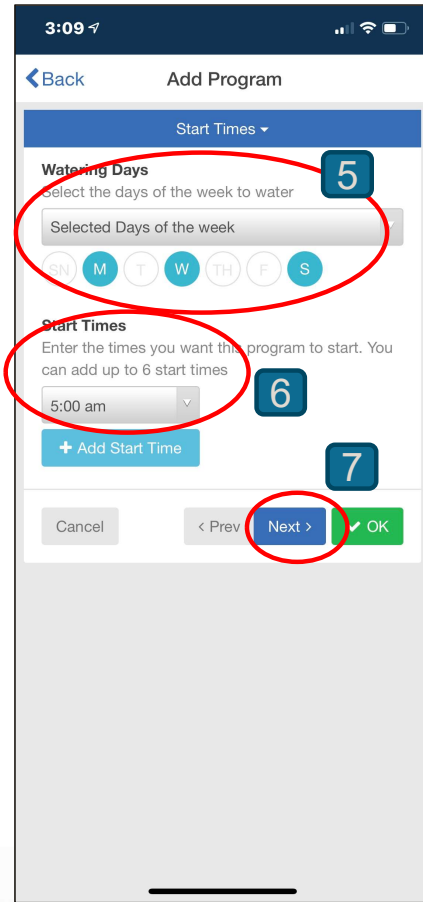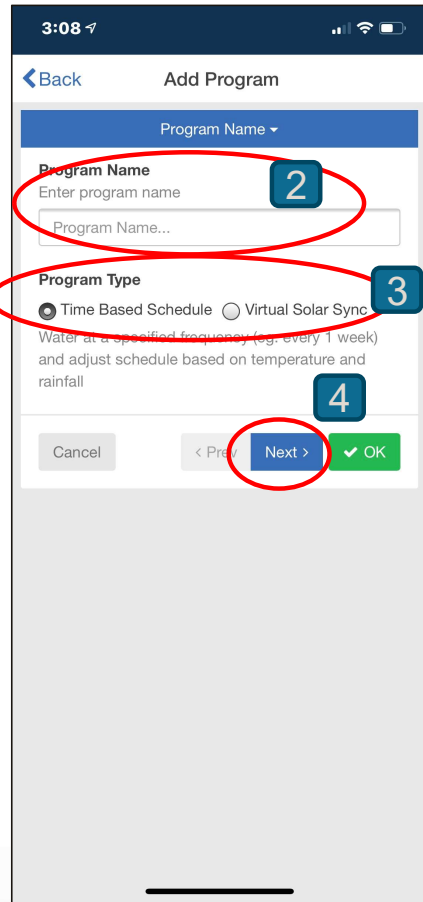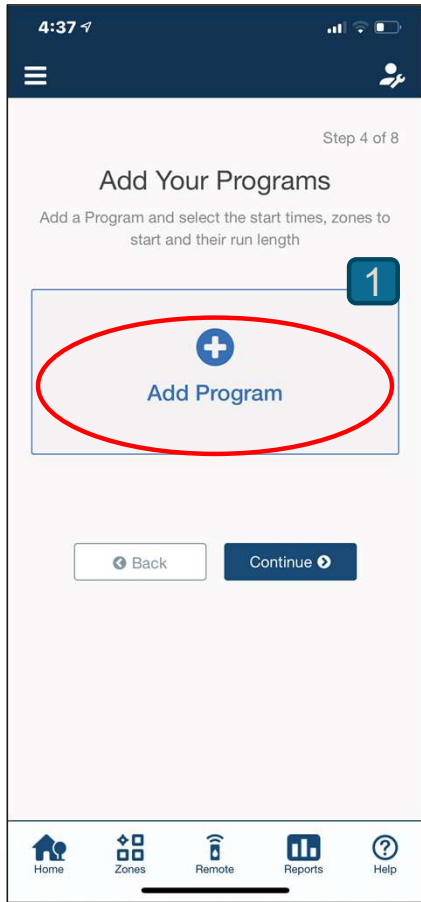

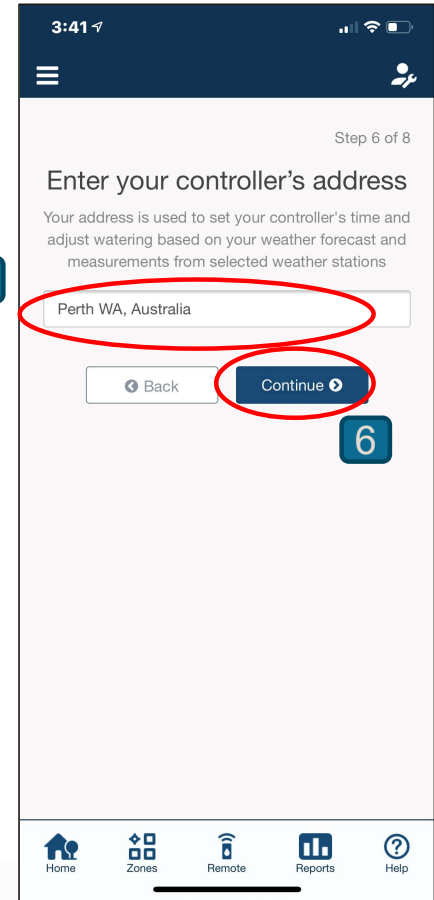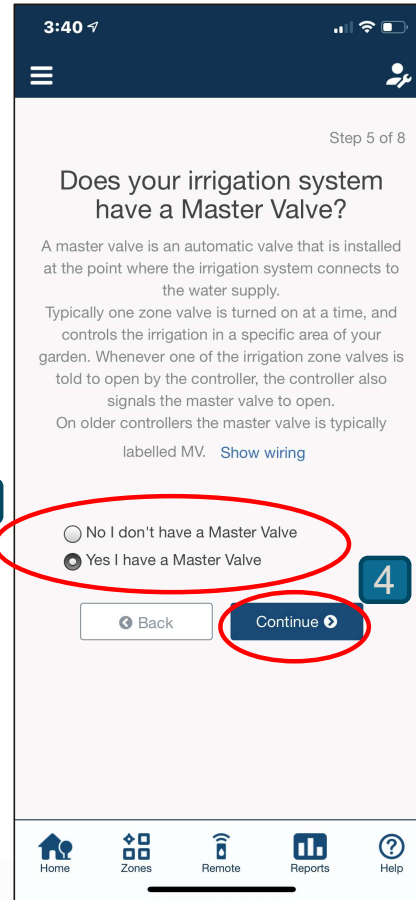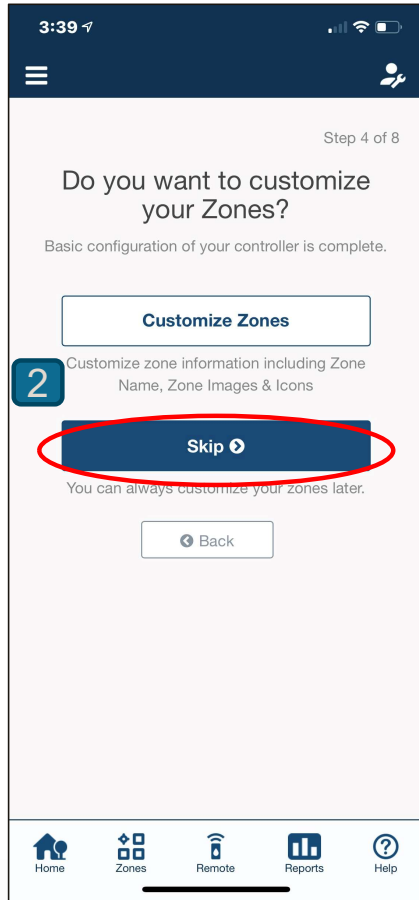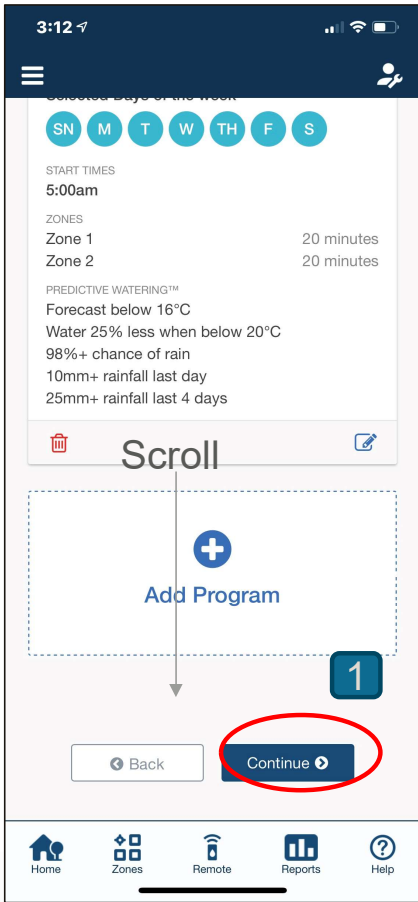

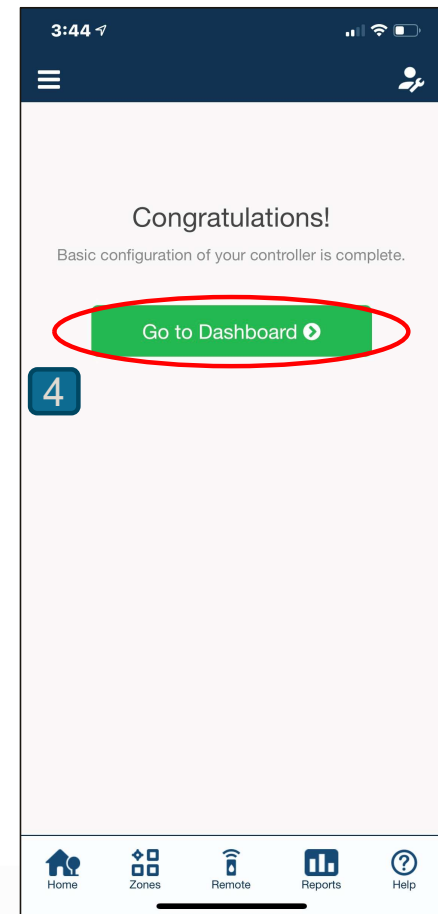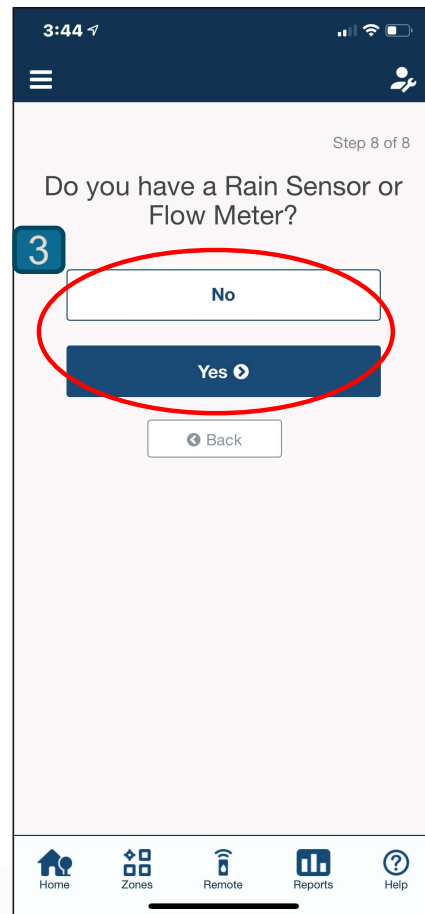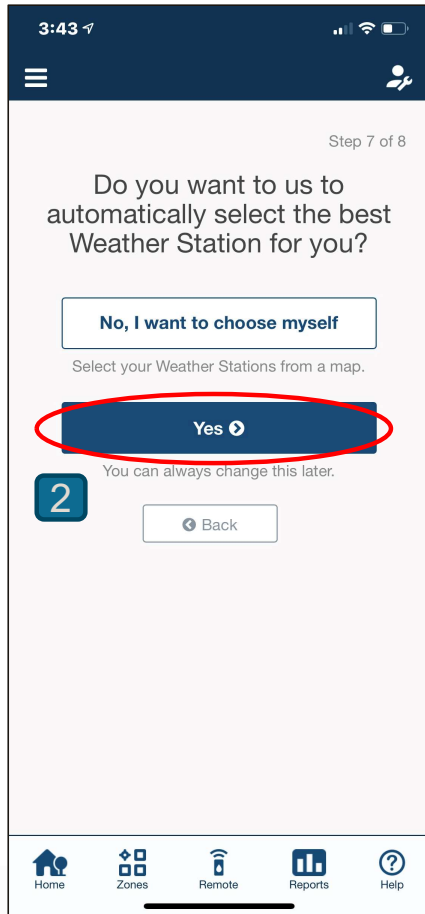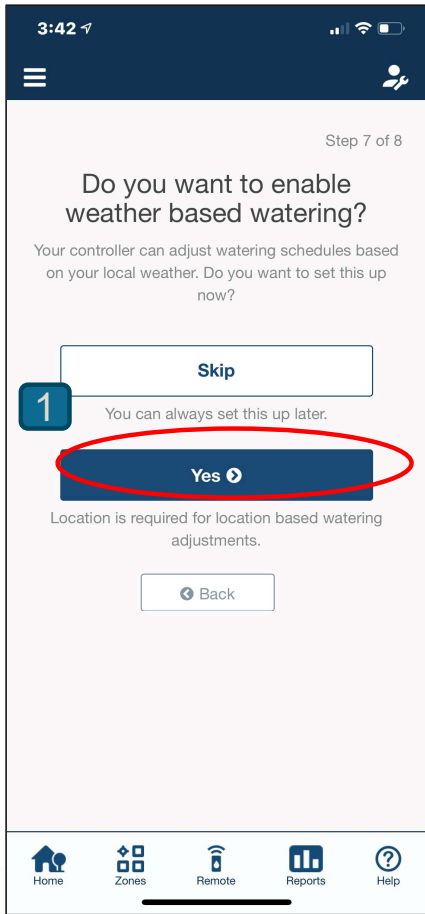


<https://www.hunterindustries.com/en-metric/support/wand-wi-fi>

SUPPORT | X2 SUPPORT

WAND - FACTORY RESET

READ ARTICLE

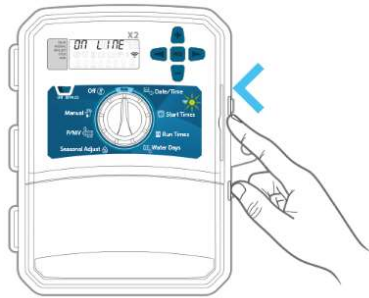

1. Press and hold the WAND button for 5 seconds and 'Fdr' will appear on the controller LCD.
2. The module LED will turn off.
3. Release the button when the solid amber LED appears. The word "DONE" will appear on the controller LCD.
4. Return to the setup process to reconnect WAND to Wi-Fi.

SUPPORT | X2 SUPPORT

WAND - SAP (SOFTAP) SETUP

READ ARTICLE

A line drawing of a hand pressing the 'WAND' button on the controller's LCD screen twice. A blue arrow points to the button, and another blue arrow points to the LCD screen with a '<x2' label.

1. Enable the Wi-Fi setting on your device.
2. Press the WAND button twice. The solid amber LED will blink twice per second and 'SAP' will appear on the controller LCD.
3. In your smartphone, tablet, or computer Wi-Fi settings connect to the network named HunterX2000.

Hydrawise Support
E: support@hydrawise.com
Ph: 02 82947781

SUPPORT | X2 SUPPORT

X2 - WAND ERR CODES

READ ARTICLE

Here is a list of the error codes and ways to troubleshoot them:

X2 - CONTROLLER CODE	CODE DESCRIPTION	SOLUTION
FAIL	The provisioning failed	Re-provision the device
donE	The previous operation is complete	N/A
bAd/SSID/OR/PASS/CodE	The AP was not found or the password is incorrect	Check the spelling of the SSID and/or password
rouTer/CONNECT/FAIL	Cannot connect to the AP	Check that AP is available.
Cloud/CONNECT/FAIL	Can't connect to Hydrawise	Server down or Certificate is bad
OFF/LINE	WAND was connected to the AP, but the Wi-Fi connection went away.	Check AP/Internet
ONLINE	Connected to Hydrawise Server	N/A
PUSH/SIdE/ButtOn	Press the button to begin provisioning	Press the button [1 2 3] times to select the desired provisioning method.
H.xxx	WAND Firmware Version Number	N/A
C.xxx	X2 Controller Firmware Version Number	N/A