

ARC ADJUSTMENTS

All I-40/41 group adjustable heads are preset to approximately 180°. Sprinklers may be adjusted with water on or off. It is recommended that initial adjustment be made before installation.

1. Using the palm of your hand, rotate the nozzle turret counterclockwise to left stop to complete any interrupted rotation cycle. (Fig. 1).
2. Rotate the nozzle turret clockwise to right stop. This is the fixed side of the arc. The nozzle turret must be held in this position for all arc adjustments.

To Increase Arc

1. Insert the key end of the Hunter wrench into the adjustment socket (Figs. 2 & 3).
2. While holding the nozzle turret at the right stop, turn the wrench clockwise. Each 360° turn of the wrench increases the arc 45°.
3. Adjust to any arc between 40° and 360°.
4. Wrench will stop turning, or there will be a ratcheting noise, when the maximum arc (360°) is reached.

To Decrease Arc

1. Insert the key end of the Hunter wrench into the adjustment socket (Figs. 2 & 3).
2. While holding the nozzle turret at the right stop, turn the wrench counterclockwise. Each 360° turn of the wrench decreases the arc 45°.
3. Adjust to any arc between 40° and 360°.
4. Wrench will stop turning, or there will be a ratcheting noise, when the minimum arc (40°) is reached.

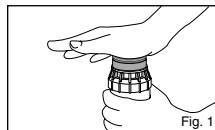


Fig. 1



Fig. 2

Radius Adjustment

Insert the hex end of the Hunter wrench into the nozzle-retainer/range-adjustment screw (Figs. 2 & 3). Turn the screw clockwise into the stream of water to decrease the radius, or counterclockwise to increase the radius.

Precipitation Rate Adjustment

Where excessively wet or dry areas are a problem, the precipitation rate may be adjusted. Simply replace the existing nozzle with a larger one to increase, or a smaller one to decrease the rate of precipitation.

Nozzle Installation

1. Insert the key end of the Hunter wrench into the lifting socket of a pop-up sprinkler. Pull the riser up to gain access to the nozzle socket.
2. Using the Hunter wrench, loosen the nozzle-retainer/range-adjustment screw. If a nozzle is already installed in the sprinkler, it may now be removed by briefly turning on the water.
3. Discard nozzle if removed with pliers. Slip the desired nozzle into the nozzle socket. Note that the socket is angled up 25° (see Fig. 4). Tighten the nozzle-retainer/range-adjustment screw.

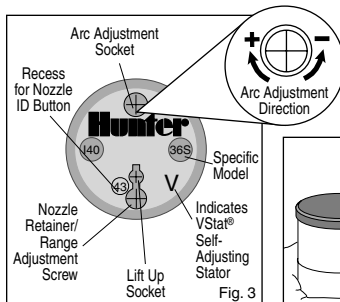


Fig. 3

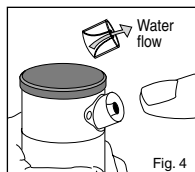


Fig. 4

I-40 Nozzle Performance Data

Nozzle	Pressure PSI	Radius ft.	Flow GPM	Precip in/hr ▲
40	40	45'	7.0	0.67
	50	46'	8.0	0.73
	60	46'	8.5	0.77
41	50	50'	10.2	0.79
	60	51'	11.1	0.82
	70	52'	12.1	0.86
42	80	53'	13.0	0.89
	50	51'	11.0	0.81
	60	53'	12.3	0.84
43	70	55'	13.1	0.83
	80	56'	13.9	0.85
	50	56'	13.5	0.83
44	60	57'	15.1	0.89
	70	59'	16.1	0.89
	80	61'	17.5	0.91
45	60	63'	20.0	0.97
	70	65'	21.8	0.99
	80	66'	23.4	1.03
	90	67'	24.9	1.07
	60	66'	22.7	1.00
	70	68'	24.7	1.03
	80	69'	26.4	1.07
	90	70'	28.2	1.11

I-42 Nozzle Performance Data

Nozzle	Pressure PSI	Radius ft.	Flow GPM	Precip in/hr ▲
40	40	41'	7.0	0.80
	50	42'	8.0	0.87
	60	42'	8.5	0.93
41	50	44'	10.2	1.01
	60	44'	11.1	1.10
	70	45'	12.1	1.15
42	80	46'	13.0	1.18
	50	46'	11.0	1.00
	60	47'	12.3	1.07
43	70	49'	13.1	1.05
	80	50'	13.9	1.07
	50	51'	13.5	1.00
44	60	52'	15.1	1.07
	70	52'	16.1	1.15
	80	53'	17.5	1.20
45	60	58'	20.0	1.14
	70	58'	21.8	1.25
	80	60'	23.4	1.25
	90	60'	24.9	1.33
	60	60'	22.7	1.21
	70	62'	24.7	1.24
	80	64'	26.4	1.24
	90	65'	28.2	1.28

I-41 Nozzle Performance Data – Metric


Nozzle	Pressure Bars	Radius m	Flow m ³ /hr	Precip mm/hr ▲
40	2.8	275	13.7	1.59
	3.4	344	14.0	1.82
	4.1	413	14.0	1.93
41	3.4	344	15.2	2.32
	4.1	413	15.5	2.52
	4.8	482	15.8	2.75
42	5.5	551	16.2	2.95
	3.4	344	15.5	2.50
	4.1	413	16.2	2.79
43	4.8	482	16.8	2.98
	5.5	551	17.1	3.16
	4.1	413	17.4	3.43
44	4.8	482	18.0	3.66
	5.5	551	18.6	3.97
	4.1	413	19.2	4.54
45	4.8	482	19.8	4.95
	5.5	551	20.1	5.31
	6.2	620	20.4	5.66
	4.1	413	20.1	5.16
	4.8	482	20.7	5.61
	5.5	551	21.0	6.00
	6.2	620	21.3	6.40

I-43 Nozzle Performance Data – Metric


Nozzle	Pressure Bars	Radius m	Flow m ³ /hr	Precip mm/hr ▲
40	2.8	275	12.5	1.59
	3.4	344	12.8	1.82
	4.1	413	12.8	1.93
41	3.4	344	13.4	2.32
	4.1	413	13.4	2.52
	4.8	482	13.7	2.75
42	5.5	551	14.0	2.95
	3.4	344	14.0	2.50
	4.1	413	14.3	2.79
43	4.8	482	14.9	2.98
	5.5	551	15.2	3.16
	4.1	413	15.9	3.43
44	4.8	482	15.9	3.66
	5.5	551	16.2	3.97
	4.1	413	17.7	4.54
45	4.8	482	17.7	4.95
	5.5	551	18.3	5.31
	6.2	620	18.3	5.66
	4.1	413	18.3	5.16
	4.8	482	18.9	5.61
	5.5	551	19.5	6.00
	6.2	620	19.8	6.40

Note: All precipitation rates are calculated for 180 degree operation.
For the precipitation rate for a 360 degree sprinkler, divide by 2.

CORRECT INSTALLATION

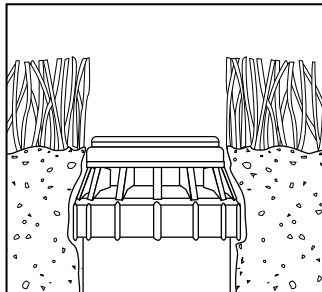


IDENTIFYING NOZZLE NUMBERS



Each nozzle can be identified by the number of raised ridges on the inside surface of the nozzle.

Example: 2 ridges = # 42 nozzle

FULL CIRCLE ROTATION SPEED



I-40/41 = 3 minutes (approx.)
I-42/43 = 1 minute (approx.)

Data represent test results in zero wind. Adjust for local conditions. Radius may be reduced up to 25% with adjustment screw (this may alter the uniformity of the spray pattern).